



Bio-Zyme

DOSE IT PUMP HEAD

Pump Head and Squeeze Tube



Code: V-Dose it pump head

Content per bag: - Pump Head
- 2x Screws
- Squeeze Tube
(attached to the Pump Head)

Your New Zealand Manufactured Organic Solution
to a Clean Green Environment

www.bio-zyme.co.nz
0800 246 9963 | office@bio-zyme.co.nz

DOSE IT PUMP HEAD | INSTALLATION

INTRODUCTION

Thank you for purchasing our Bio-Zyme Dose It Pump Head and Squeeze Tube.

To ensure that your installation proceeds smoothly, read these instructions carefully before begin.

On 3 yearly service Pump Head is to be replaced and all the Repair Kit items also (Black Pipe and Joiner, Elbow and Clear Tubing).

CONTENTS

- Dose It Pump Head
- 2x Screws
- Squeeze Tube (attached)

TOOLS REQUIRED

A. Phillips Screwdriver



INSTRUCTIONS

Note: When doing any maintenance on pump this must all be recorded on the Pre-Treatment Compliance Record.

1. Remove both tubes from squeeze tube on pump head attached to pump.
2. Unscrew pump head. Discard old Pump Head.
3. Replace with new Pump Head - Flat part on back of pump head shaft lines up with the flat part on the pump shaft.
4. Move pump head to line up with screw holes.
5. Tighten firm with screws provided. Don't put much pressure, it doesn't need to be too tight.
6. Replace tubes into tubes on pump head
7. Use prime button to ensure Bio-Zyme product is flowing through.
8. Record replacement on Pre-Treatment Compliance Record.